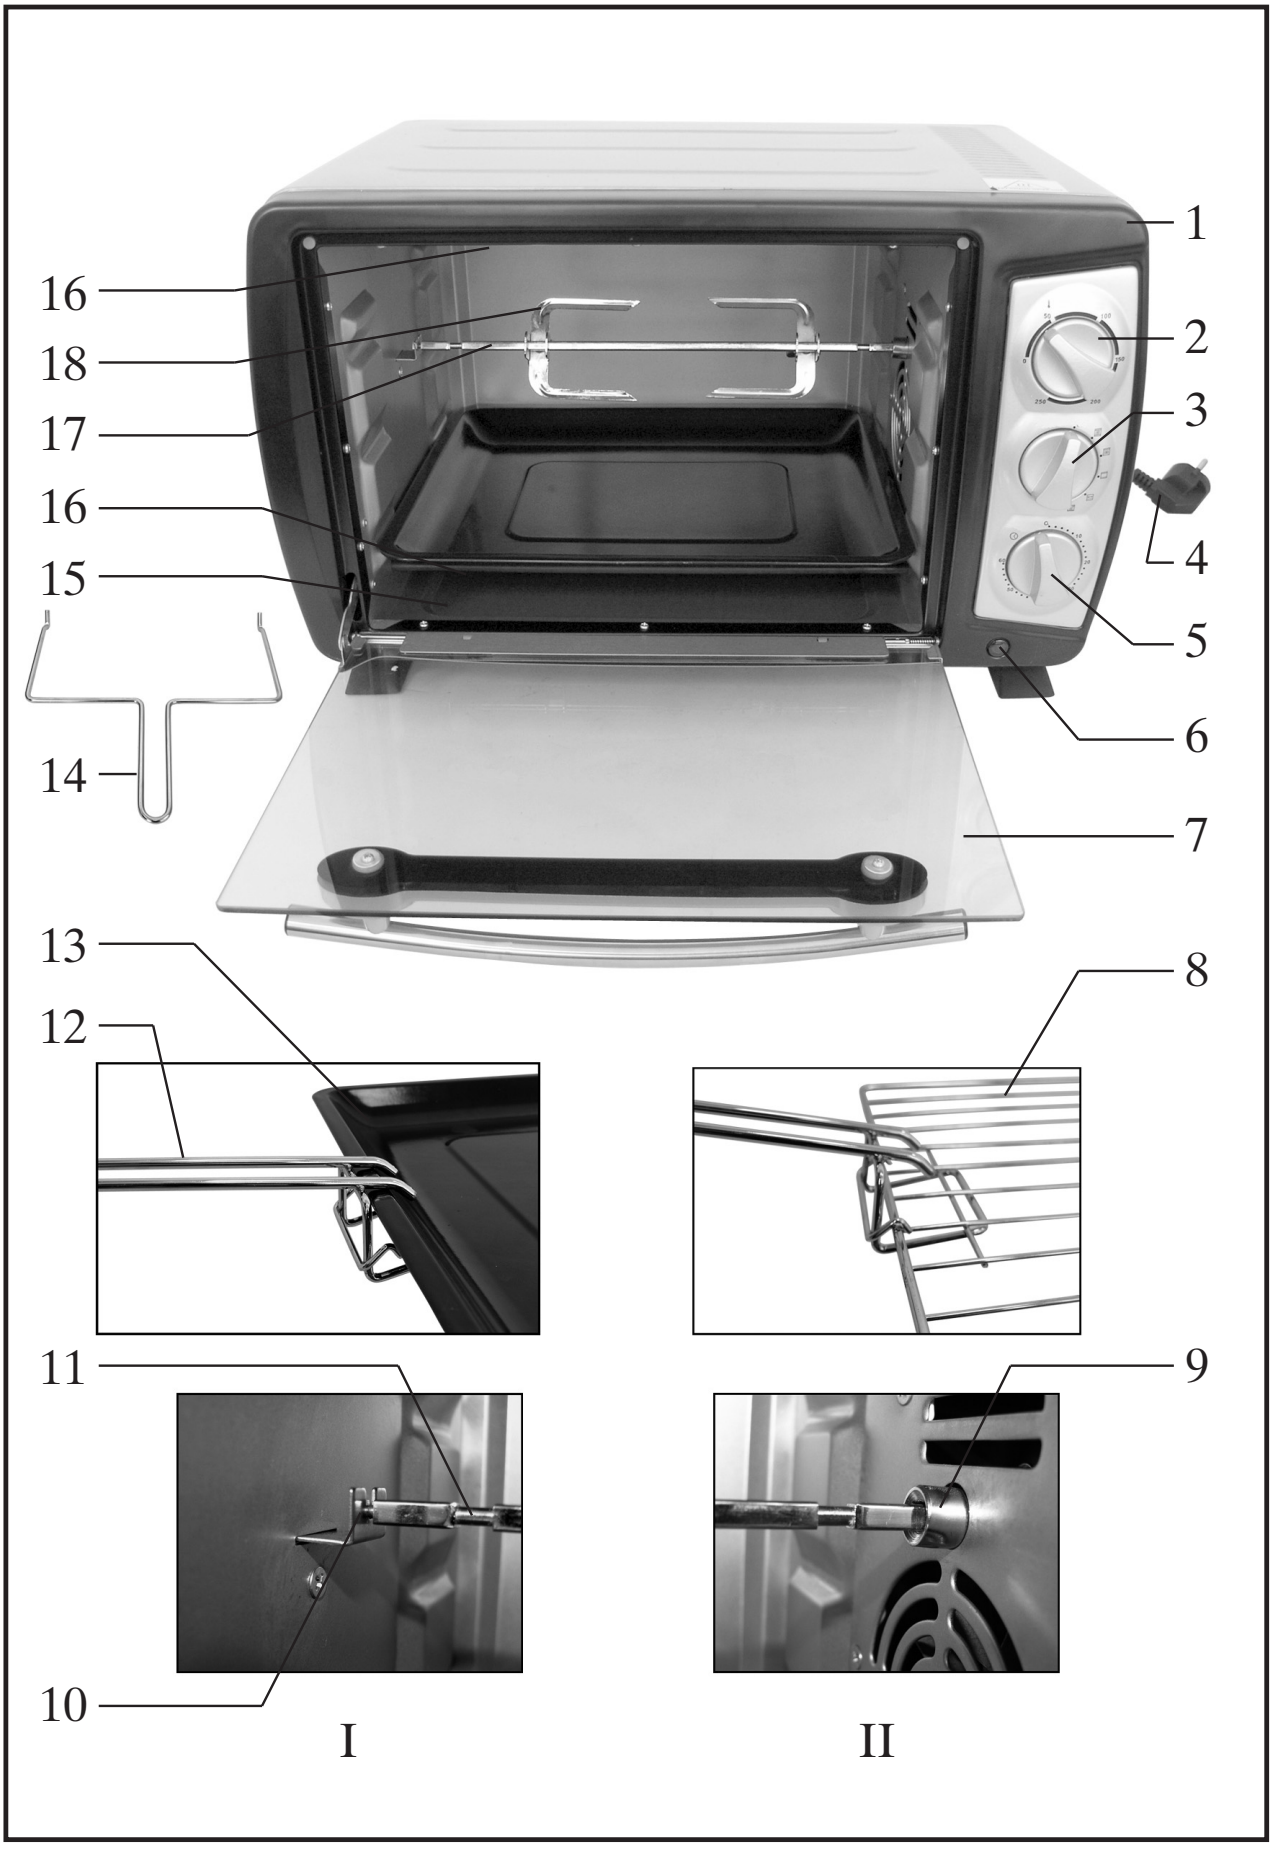
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
16
17
18
I
II

GB

Toasting oven

Dear Customer,
Before using the appliance, the user should read the following instructions carefully.

Connection to the mains supply
The appliance should only be connected to an earthed socket installed in accordance with the regulations. Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance. This product complies with all binding CE labelling directives.

Familiarisation
1. Main unit
2. Temperature control
3. 6-position switch
4. Power cord with plug
5. Timer
6. Indicator lamp
7. Door
8. Grill rack
9. Spit end-piece (drive unit connection)
10. Spit end-piece (idle)
11. Recesses for spit handle
12. Baking tray handle
13. Baking tray
14. Spit handle
15. Crumb tray
16. Heating element
17. Rotating spit
18. Food clamps

Important safety instructions
- Before the appliance is used, the main body as well as any attachments fitted should be checked thoroughly for any defects. If the appliance, for instance, has been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on its operational safety.
- This appliance operates at very high temperatures.

Warning: the door as well as the accessible surfaces of the appliance become hot during operation - burns can result from touching these hot parts.
- Do **not** touch the heating elements.
- Always ensure that the crumb tray is properly fitted under the heating elements while the appliance is in use.
- Overheated oil or fat may tend to ignite. Therefore do not overfill the baking tray.
- Do not leave the appliance unattended while in use.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by any persons (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not position or operate the appliance close to or underneath any wall-cupboards or hanging objects such as curtains or any inflammable materials, and do not position any objects on top of the appliance.
- During operation, the appliance must be placed on a heat-resistant surface, impervious to splashes and stains. Do not position the appliance on or near hot surfaces, open flames or inflammable vapours.
- Do not allow the power cord to touch hot surfaces.
- Do not let the power cord hang free.
- **Always switch off and remove the plug from the wall socket**
  - **after use, as well as**
  - **in cases of malfunction, and**
  - **during cleaning.**
- When removing the plug from the wall socket, never pull on the power cord;

always grip the plug itself.

- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

Temperature control

With the temperature control knob, the temperature can be set to the desired level.

6-position switch settings

Upper heat
Upper and lower heat
Upper heat with hot-air function
Upper and lower heat with hot-air function
Upper heat with rotating spit
Upper heat with rotating spit and hot-air function

The heating elements will only be switched on once the timer is activated.

Timer

By using the timer, cooking time can be selected up to a maximum of 60 minutes. After the pre-programmed time has elapsed, an acoustic signal indicates that the heating elements are switched off.

Indicator lamp

The indicator lamp lights up when the appliance is switched on with the timer. It goes out once the pre-programmed time has elapsed, or if the timer is set back manually.

Rotating spit

The rotating spit is used with the upper heat function; in addition, the hot-air function can be selected.

- Before the spit is used, always ensure that the baking tray is properly inserted into the guide rails.
- When food is put on the spit, make sure that it cannot come into contact with either the upper heating elements or the baking tray; ensure sufficient distance.
- Make sure that the spit pierces through the middle of the food. This is to ensure that there is sufficient distance between the baking tray, the oven interior and the heating elements. Use the holding clamps to secure it in the centre of the spit.
- Any protruding parts (e.g. wings of a chicken) should be held in with a tooth-pick, a suitable piece of string or other suitable means. This ensures that no part of the food can stick out or come off during the cooking process.

- *Inserting and removing the rotating spit:*
  - Once the food has been securely attached, place the spit onto the handle. Ensure that the indentations in the handle fit into the corresponding recesses in the spit.
  - Slide the spit end-piece with the drive unit connection into the drive unit (see picture **II**).
  - Place the idle end of the spit into its holding bracket on the opposite side (see picture **I**).
  - To remove the spit, follow these steps in reverse order.

Start up

- Clean the appliance (see *General care and cleaning*) and remove any packing materials completely.
- Before using the appliance for the first time, let it heat up for 10 minutes with both heating elements on. When the appliance is first switched on, a slight

smell may be emitted. This is normal and will only last for a very short time. Ensure sufficient ventilation.

Operation

- Before using the appliance, make sure that the crumb tray is fitted in its proper position underneath the lower heating element.
- Pre-heat the oven compartment for several minutes with the door closed, using both heating elements. Set the temperature control knob to the required level and use the timer control to select the desired pre-heating time.
- Place the food to be cooked on the grill rack. When cooking food containing fat or moisture, use the baking tray to stop any drips into the interior of the appliance. When using the spit, always ensure that the baking tray is properly inserted in the lowest guide rails.
- Close the door, set the temperature control to the required level and use the timer knob to select the desired cooking time.
- For baking or grilling from above, either the upper or the upper and lower elements may be selected.
- The switch settings may be changed during the cooking process.
- After the pre-programmed cooking time has elapsed, the timer will automatically switch off the heating elements.
- To switch off the appliance earlier, set the timer to '●'.
- Always use the door handle to open the hot glass door after use. When removing the baking tray or grill rack, use the baking tray handle provided. Likewise, when removing the spit, the spit handle must be used. Always place the baking tray on a heat-resistant surface.
- Remove the plug from the wall socket.

Cooking times

The grilling/cooking times listed are approximate only, as each type of food is of a different nature and consistency; please also refer to the information contained on the food packaging.

Food	Temperature / switch setting	Grilling / cooking time
Chicken (rotating spit)	180°C	60 mins.
Pizza (deep-frozen)	200°C	10-12 mins.
Pizza (deep-frozen)	220°C	13-15 mins.
'Hawaii' Toast	220°C	10-14 mins.
Baguette (deep-frozen)	200°C	14-15 mins.
Baguette (deep-frozen)	220°C	15-16 mins.
Cookies, biscuits	175°C	15-17 mins.
Cakes, pastry	150°C	50-60 mins.

General care and cleaning

- Before cleaning the appliance, ensure it is disconnected from the power supply and has completely cooled down.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- Do not use abrasives, harsh cleaning solutions or spray-type oven cleaners.
- The exterior of the housing may be cleaned with a damp, lint-free cloth.
- The baking tray, grill rack, rotating spit and holding clamps may be cleaned using hot water and a mild detergent, or in a dish-washer.
- If necessary, the crumb tray may be removed and cleaned using hot water and a mild detergent. Be sure to replace it in the proper position underneath the heating element after cleaning.

Disposal

Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.